



Quick And Easy To Apply...

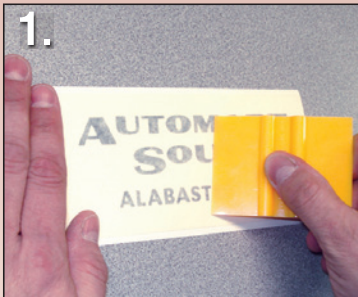

1. Lay decal FACE UP on a smooth hard surface. Squeegee the surface to ensure good contact between the pre-mask and the vinyl beneath it.

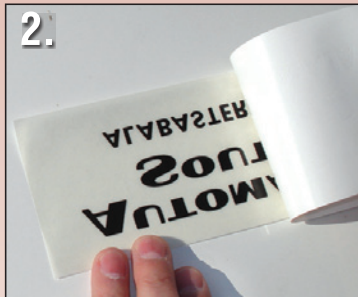

2. Lay decal flat FACE DOWN. Slowly remove backing paper from the pre-mask, pulling straight back and flat as shown (not at an angle).



3. Apply pressure-sensitive vinyl to prepared surface, then squeegee pre-mask surface using overlapping strokes.



4. To expose product, pull pre-masking away at an angle as shown above, using a continuous motion. If bubbles occur in the letters, simply prick with a needle and smooth. Do not use a knife or razor.

Note: White Pro-Cuts may be supplied on a colored liner for improved visibility. Clear pre-mask is also available on some items. While different liners and pre-masks may have different release properties, all material types will release successfully following the steps specified above.